

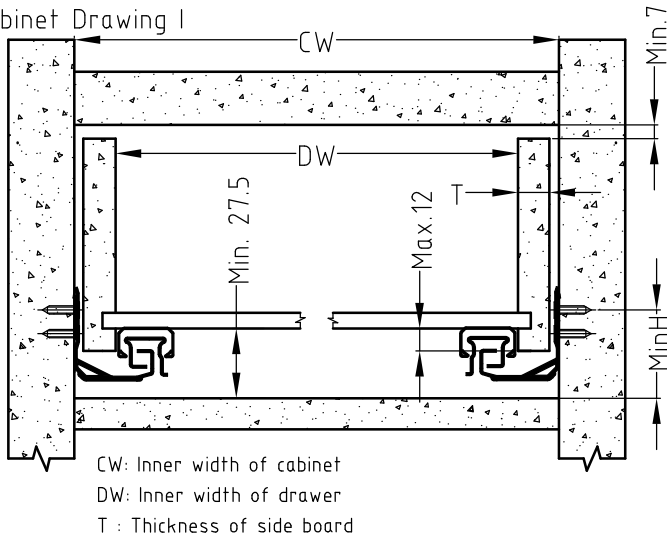
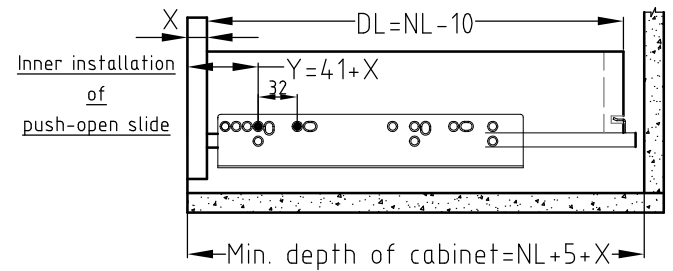


Cabinet Drawing I

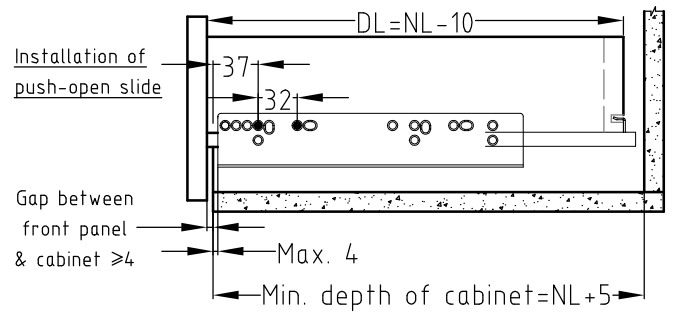

Cabinet Drawing II


DL: Drawer length
NL: Nominal length

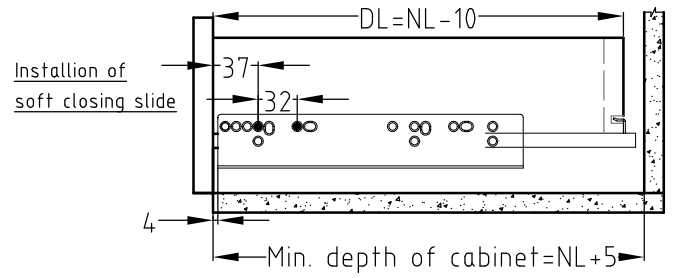

T	DW	For example	Concealed slide
			H
≤16	=CW-4 _{-1.5} ⁰	CW=564 and DW=522~523.5	37
17-19	=CW-4 _{-1.5} ⁰	CW=564 and DW=515~516.5	34

Installation of Hole Position




Notes: ● suggested hole position

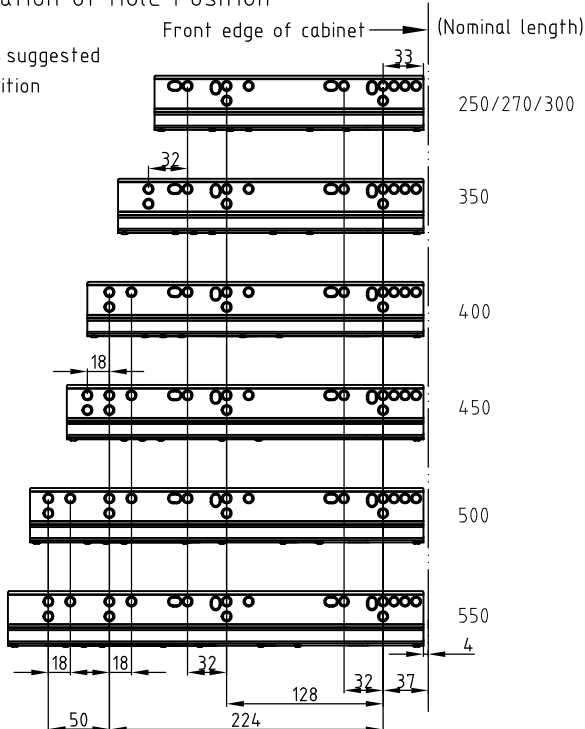


Processing Drawing of Drawer

For clip-on slide only

For standard slide only

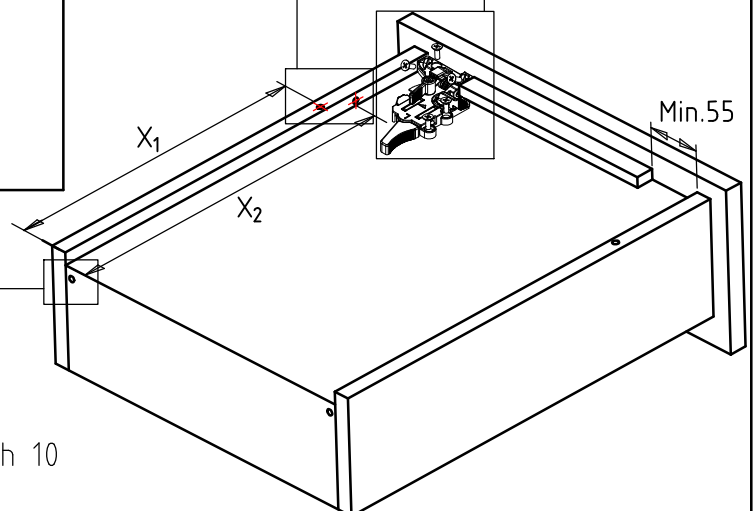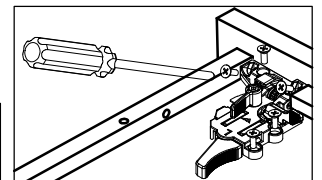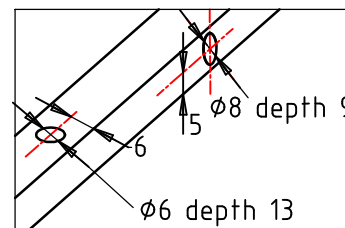

For all slides

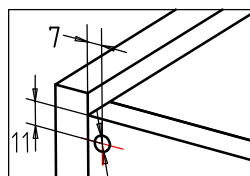

Ø6 depth 10


NL	X1(mm)	X2(mm)
250	205	225
270/280	205	248
300/310	230	275
350/360	275	320
400/410	300	376
450/460	335	421
500/510	360	466
550/560	405	511

YuGo Concealed Slide Installation Instruction


Loading Capacity: 30 KG

Side Board Thickness of drawer: $\leq 16, 19 \text{ mm}$


Drawer Installation (Standard Slide)

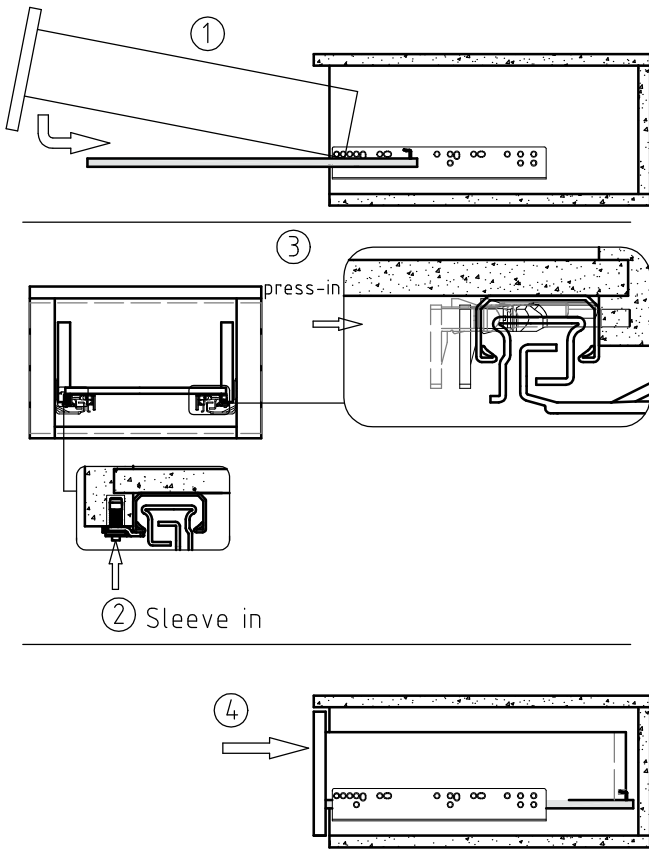


Regulation (Standard Slide)

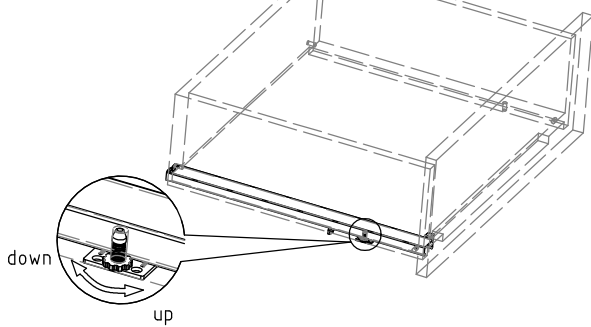


Disassembling (Standard Slide)

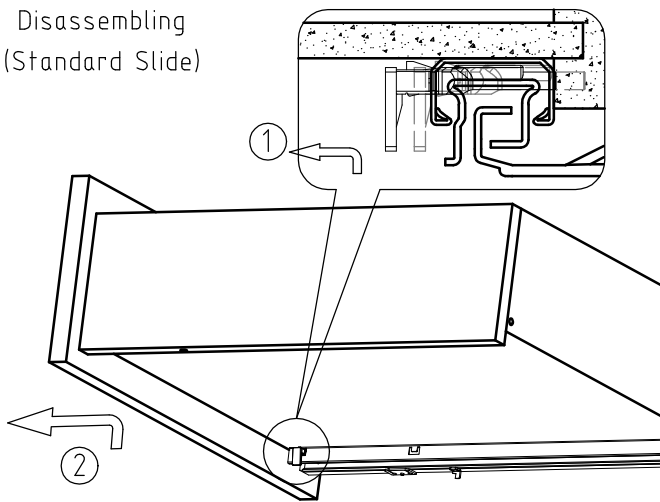


Drawer Installation (Clip-on Slide)

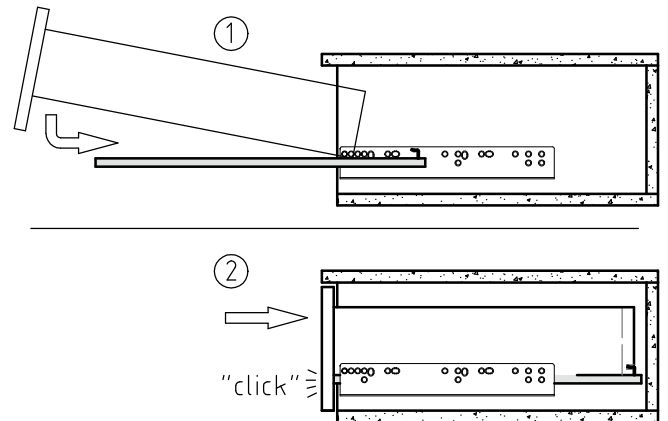

Regulation (Clip-on Slide)

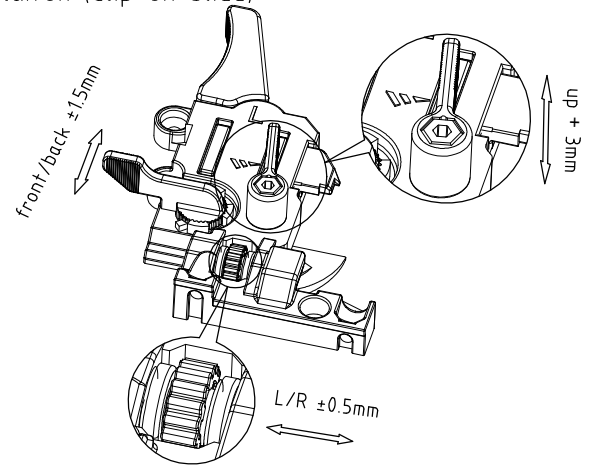

Disassembling (Clip-on Slide)

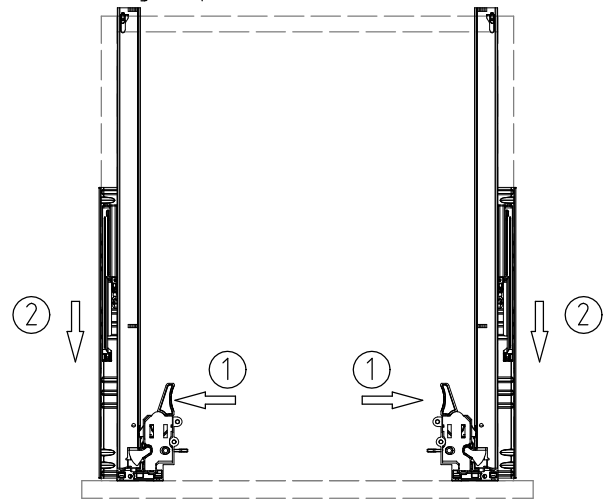

Notes:

- a) Runner doesn't work steadily or pulse?
Keep slides away from wood chips or other scraps during installation.
- b) Runner doesn't work smoothly?
Make sure cabinet and drawer are up to the standard;
make sure cabinet and drawer are rectangular;
make sure slides at the same level;
- c) The clip-on function lost? Drawer can't close perfectly?
Make sure the slide at the right position on the fore-and-aft direction;
- e) Drawer can't be disassembled?
Make sure clip-on handle is open and locking pin is pull out.
- ※ f) Push open space is not enough?
Make sure the cabinet and slide are horizontal.
- ※ g) Drawer can't push open?
Make sure push-open gap is more than 4mm.

Notes: ※ for push-open concealed slide only.