



Exploded view

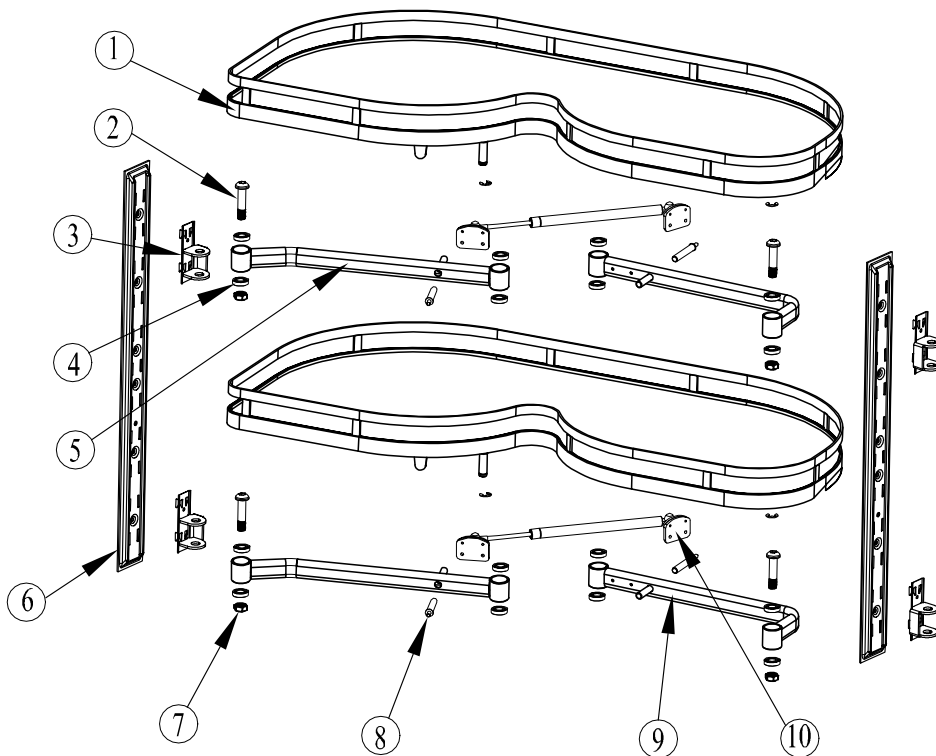


Cabinet	W	D	H
1200	935	505	596

No.	Name
1	Tray
2	Axis
3	Side Bracket
4	Bearing
5	Straight Bar
6	Fixed Plate
7	E Rings
8	Buffer
9	Curve Arm
10	Gas Spring


1. Locate screw and bolting position

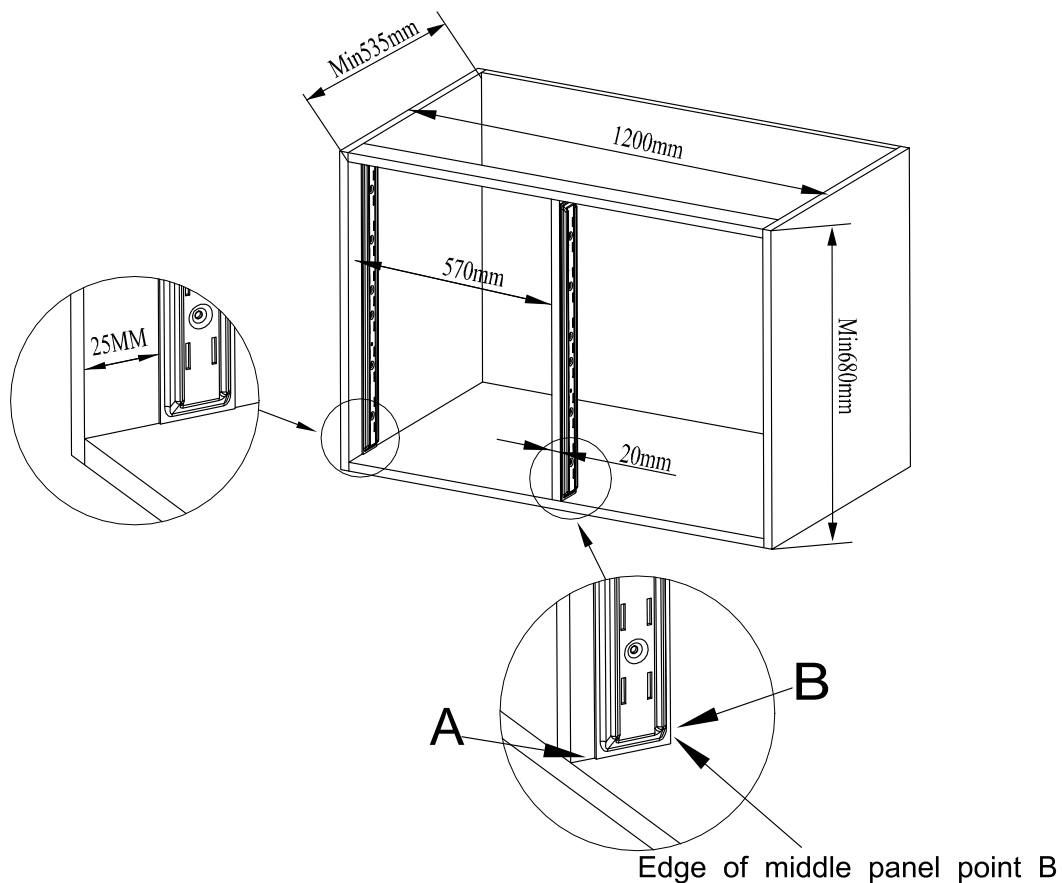


2. Mounting of arms and pole

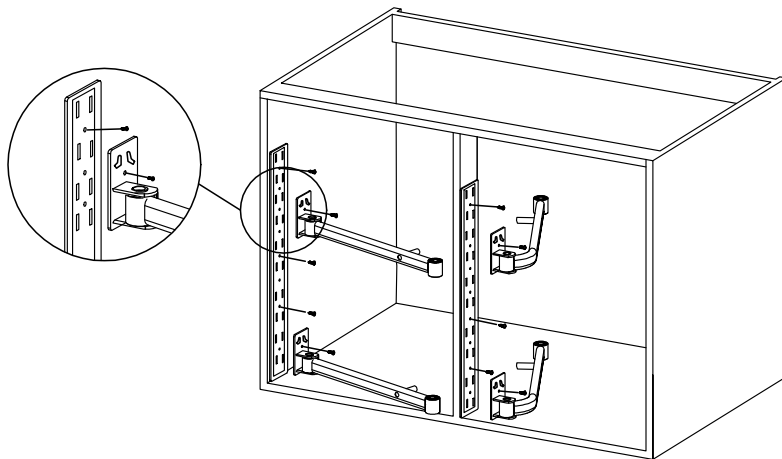


Adjust the position of the curve arm and straight bar

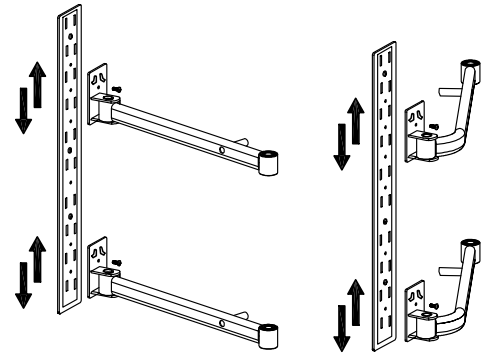


3. Mounting of gas spring and buffer

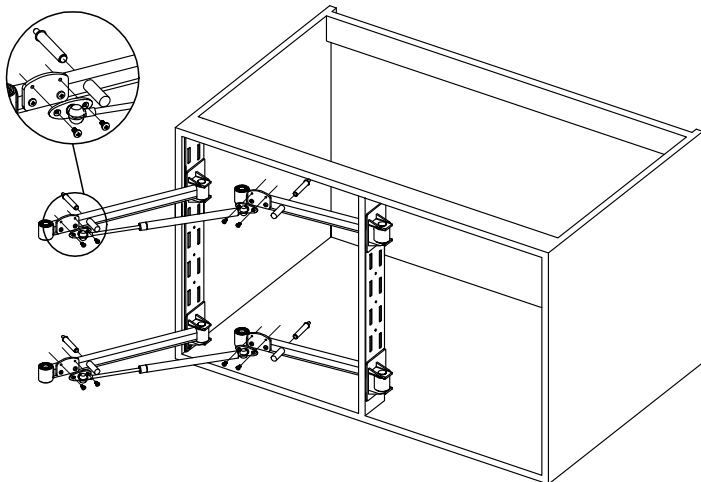

4. Fitting of the peanuts

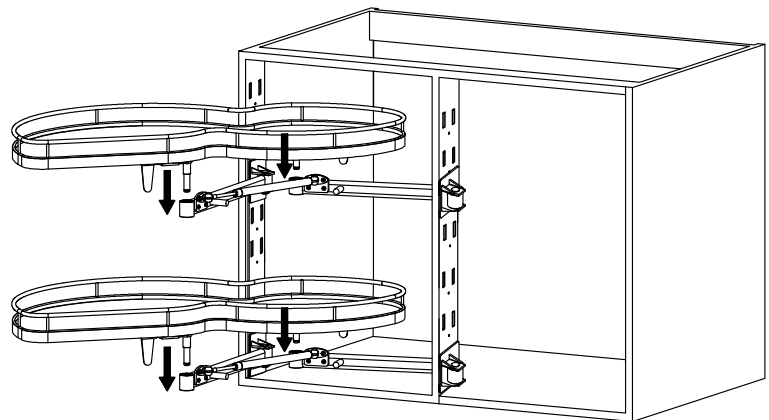


5. Complete installtion

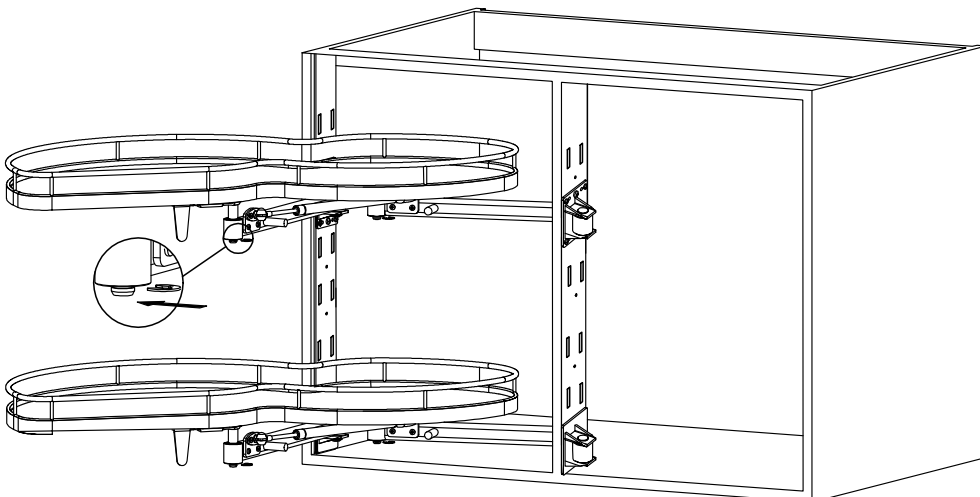


Exploded view

Cabinet	W	D	H
1200	935	505	596

No.	Name
1	Tray
2	Axis
3	Side Bracket
4	Bearing
5	Straight Bar
6	Fixed Plate
7	E Rings
8	Buffer
9	Curve Arm
10	Gas Spring


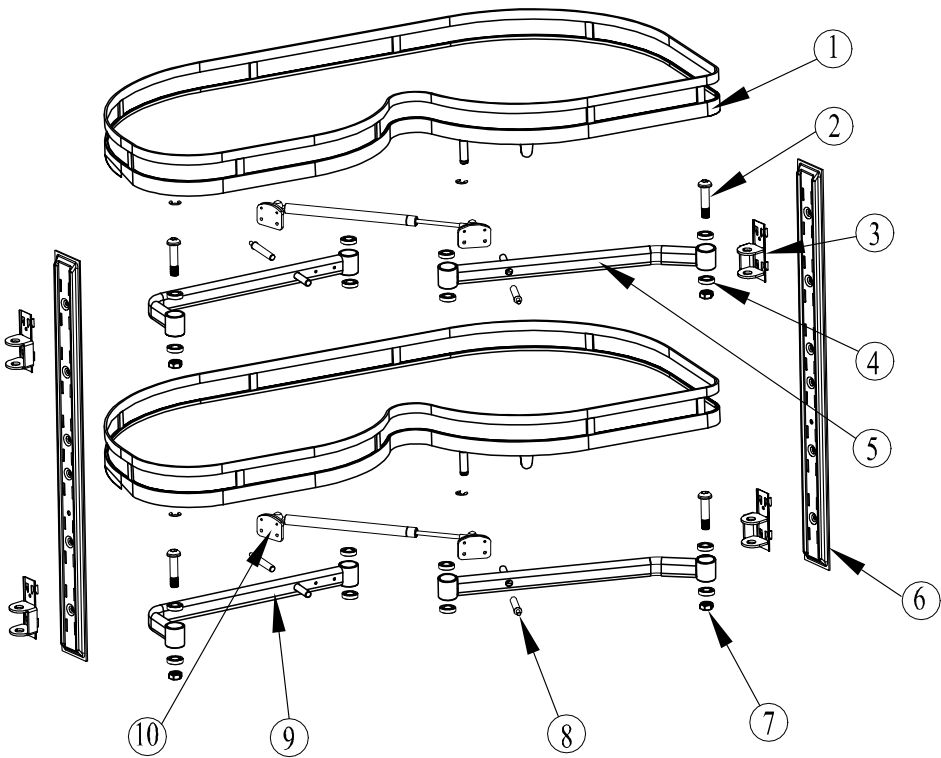


1. Locate screw and bolting position

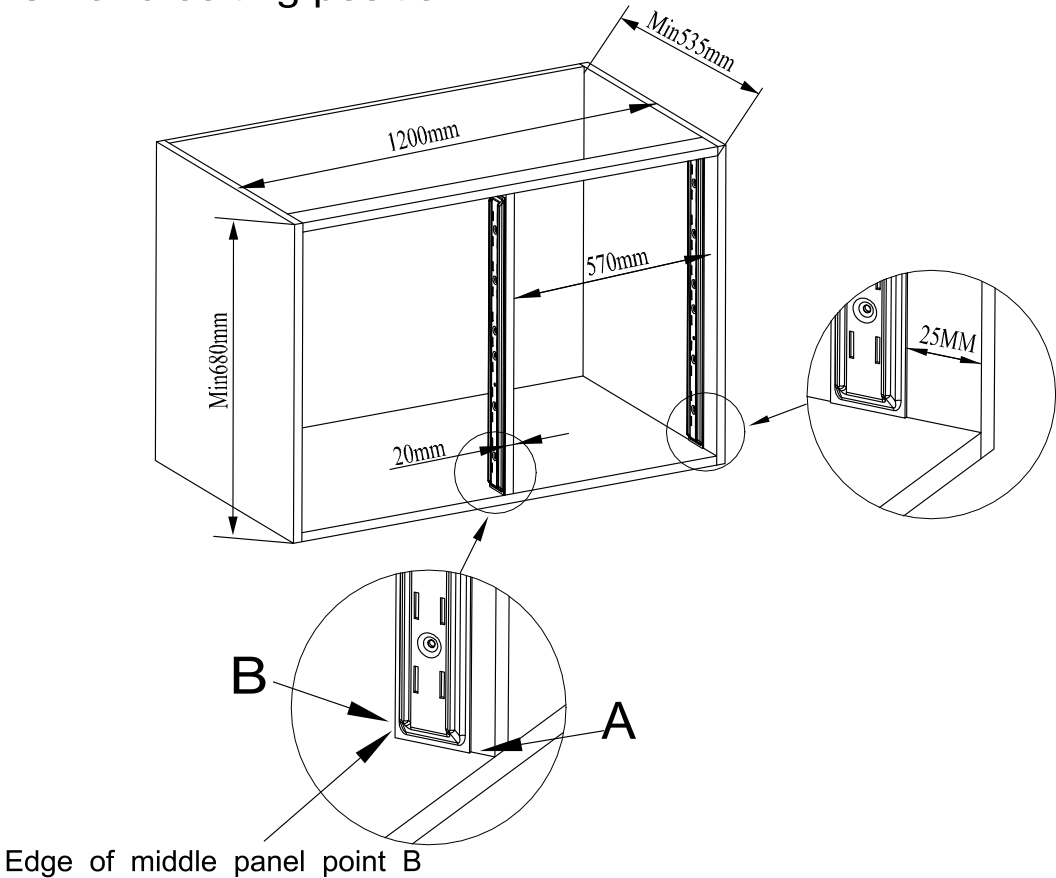


2.Mounting of arms and pole


Adjust the position of the curve arm and straight bar

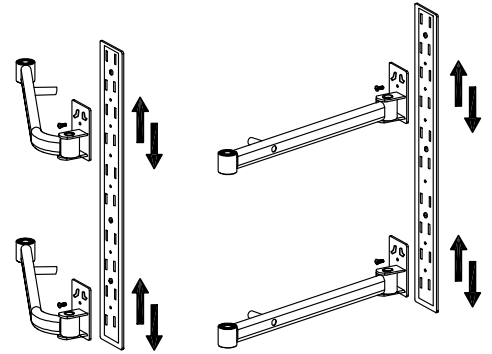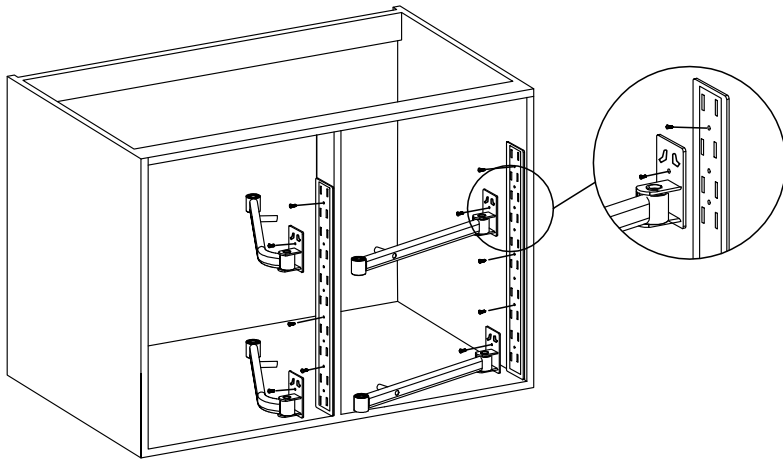

3.Mounting of gas spring and buffer

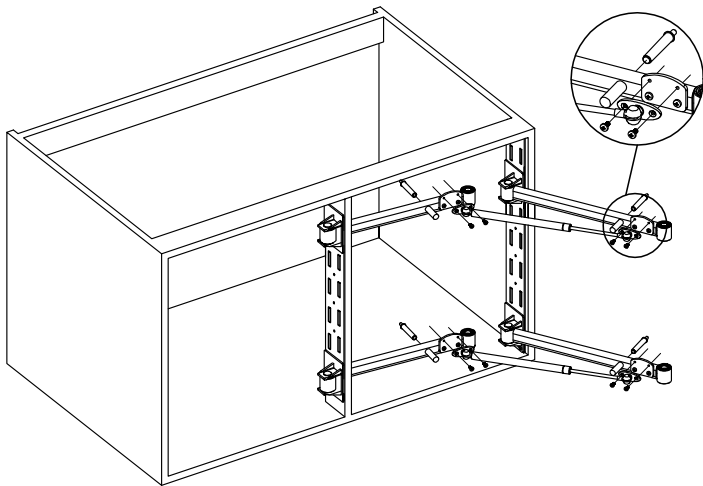

4.Fitting of the peanuts

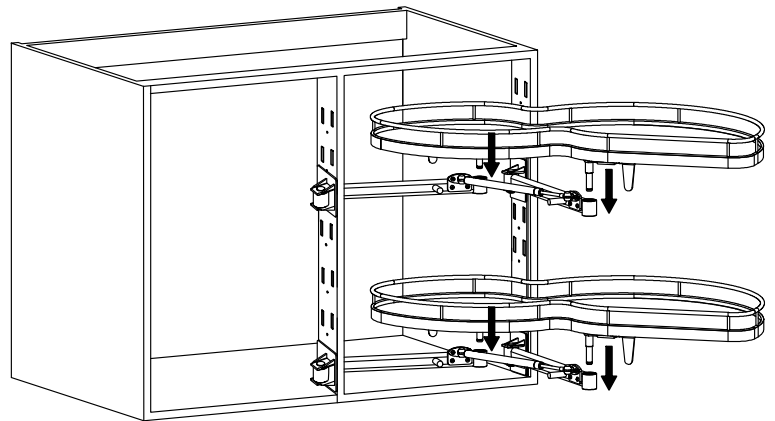

5.Complete installtion

