


Installation Instruction of Single Extension Concealed Slide

Loading Capacity: 20 KG

Side Board Thickness of drawer: ≤ 16 mm or 19mm


Cabinet Drawing I

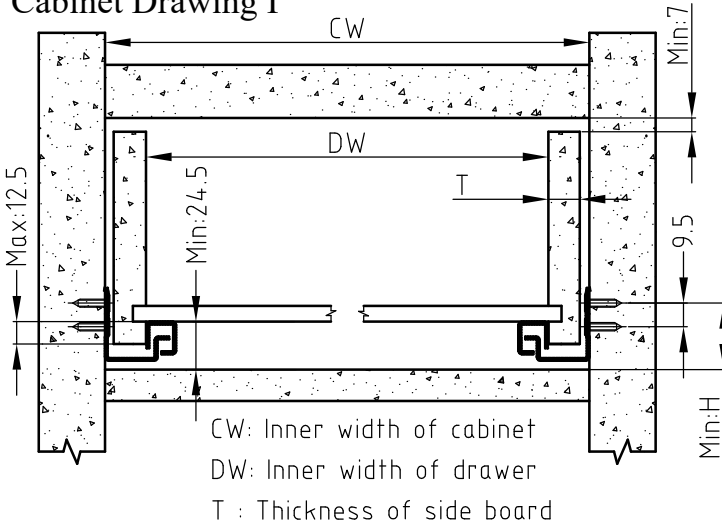

T	DW	For example	Min:H
≤ 16	$= CW - 42_{-15}^0$	CW=564 and DW=522~523.5	34
19	$= CW - 48_{-15}^0$	CW=564 and DW=516~517.5	31


Installation of Hole Position

Notes: ● suggested hole position

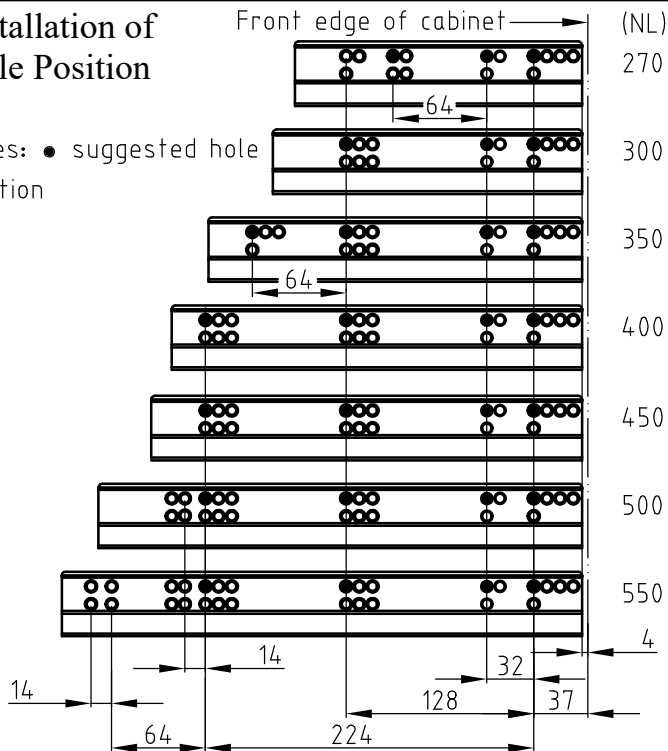


Cabinet Drawing II

Installation of soft closing slide

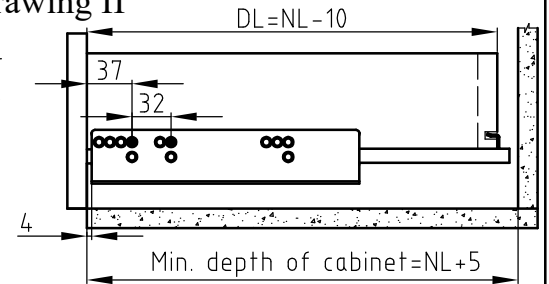


Installation of push-open slide

Gap between front panel & cabinet ≥ 4

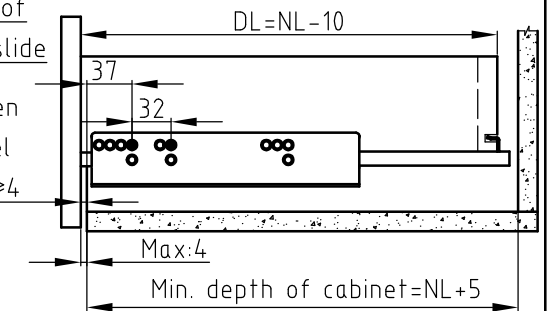

Inner installation of push-open slide

DL Drawer length
NL Nominal length



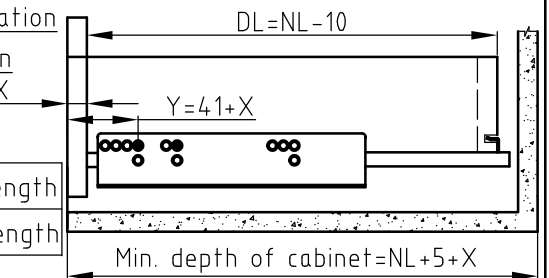


Tools


penci

drill $\phi 6$




sketch paper

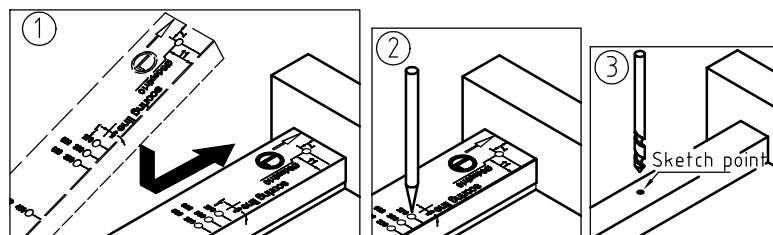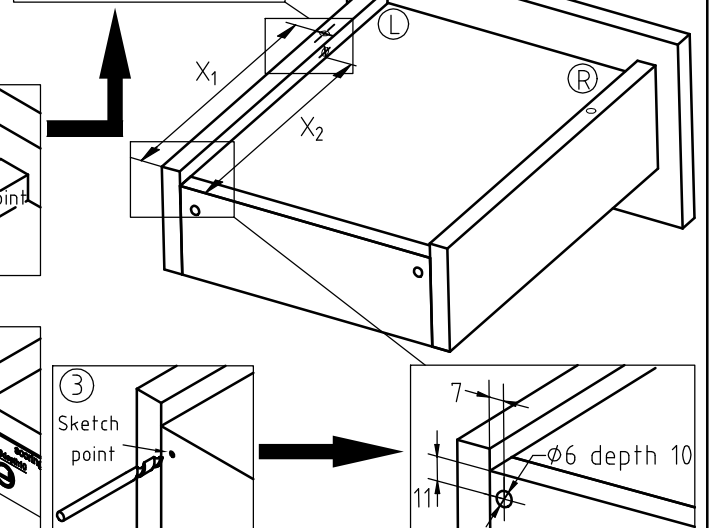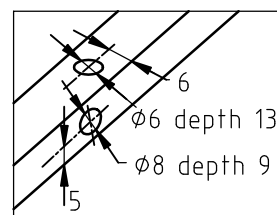


NL	X1(mm)	X2(mm)
270	205	251
300	230	251
350	275	255
400	300	280
450	335	315
500	360	340
550	405	385

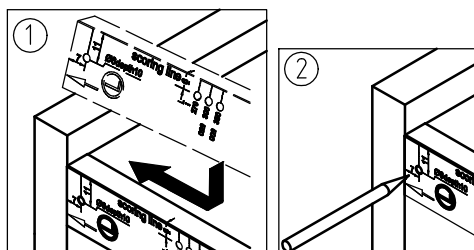

Drawer Installation

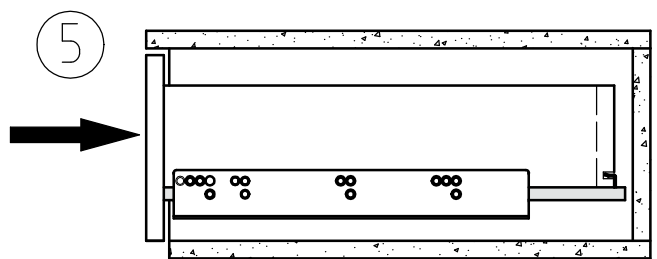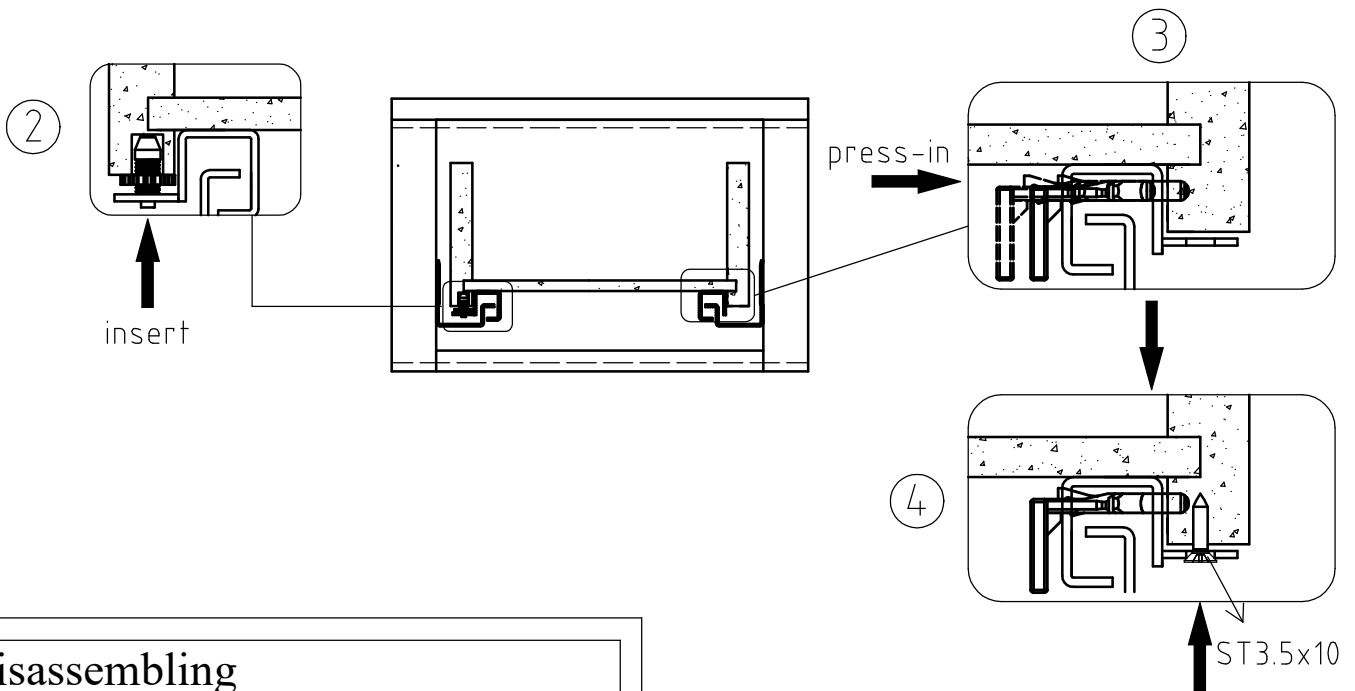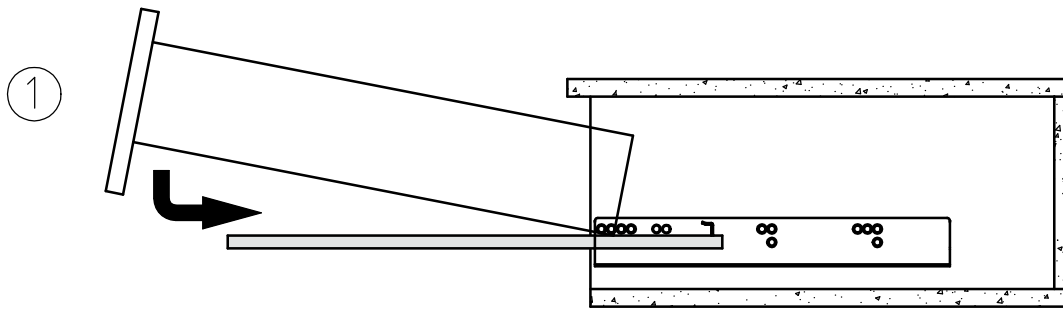

Disassembling

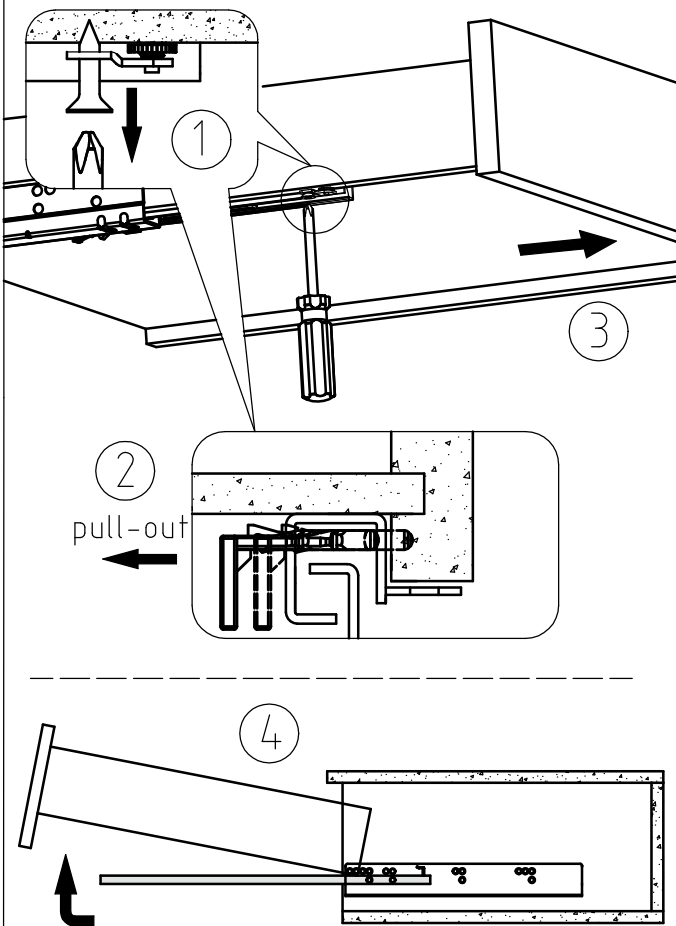

Notes:

- a) Runner doesn't work steadily or pulse?
Keep slides away from wood chips or other scraps during installation.
 - b) Runner doesn't work smoothly?
Make sure cabinet and drawer are up to the standard;
make sure cabinet and drawer are rectangular;
make sure slides at the same level;
 - c) The clip-on function lost? Drawer can't close perfectly?
Make sure the slide at the right position on the fore-and-aft direction;
 - e) Drawer can't be disassembled?
Make sure clip-on handle is open and locking pin is pull out.
 - ※ f) Push open space is not enough?
Make sure the cabinet and slide are horizontal.
 - ※ g) Drawer can't push open?
Please check whether the press gap is less than 4mm. If yes, pls reinstall the slide .
- Notes: ※ for push-open concealed slide only.